


PLAN

PROFILE

FLUME INSTALLATION DETAIL

Section B-B

Section A-A

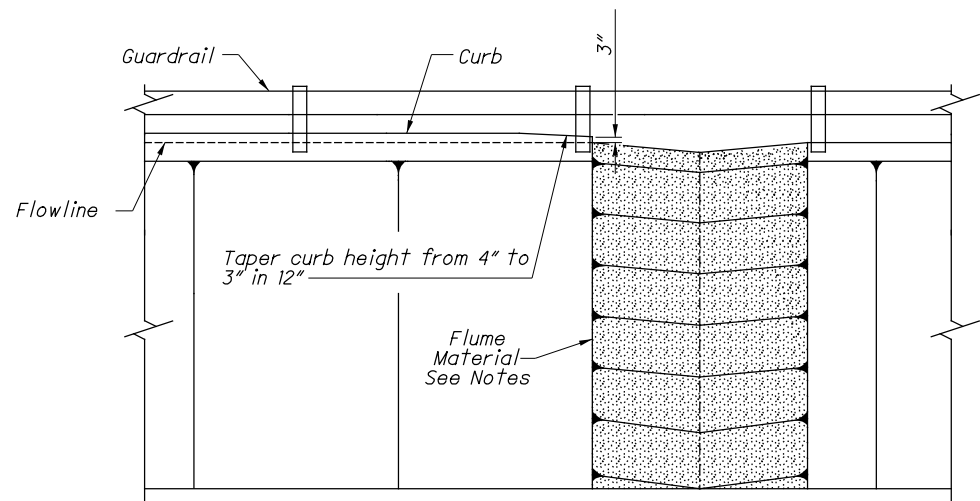

NOTES

DEPRESSED SHOULDER:
Depress this portion of the shoulder to ensure positive drainage into the center of the flume.

FLUME MATERIAL:
Provide Item 601, Tied Concrete Block Mat with Type 2 underlayment as shown in the plans. Start Tied Concrete Block Mat at the face of the guardrail. Install per the manufacturer's recommendation. Anchor the upstream end of the mat per the manufacturer's recommendation.

Shape the flume as shown, vary the center depression depth to match the depressed shoulder depth at the top of the slope and to lay the mat flat at the toe of the slope. Provide the max. depth along the slope.

PAYMENT:
Payment for all of the above is included in the unit price bid for item 601, Tied Concrete Block Mat with Type 2 Underlayment, square yard.